

CONTROL UNITS SERIES

- CT6A4 PRO-LINE
- PI 384 PRO-LINE
- PRINCESS V LINE PRO-LINE
- P.I. 372 PRO-LINE
- BES012 PRO-LINE
- P.I. 376 PRO-LINE 1M
- P.I. 376 PRO-LINE 2M
- P.I. 367 PRO-LINE 2M
- CT6E PRO-LINE
- CT6EM PRO-LINE
- CT6E-3S PRO-LINE
- CT8-M PRO-LINE
- CT8-SM PRO-LINE
- CT377 PRO-LINE

Cod.7CS99002.1



Cod.7CS99002.5



VERSION WITH ONLY THE KEY
ON THE CONTROL UNIT LID



1. Quickly turn the key on the cover from [AUTOMATIC] to [MANUAL], leaving it on [MANUAL] at the third time.

**** the control unit emits a prolonged acoustic BEEP for almost 2 seconds which means that it is now in "pairing mode"**


2. Pointing the remote control towards the receiving point on the cover identified with "LOAD" (at the distance of approximately 50 cm) and press the button [RAISE] for a few seconds.



3. Wait until the control unit emits 3 BEEP sounds, confirming that the memorisation has been completed. Then release the button.

4. procedure is completed. **Turn the key on [AUTOMATIC]**

VERSION WITH THE RED BUTTON
ON THE PRINTED CIRCUIT BOARD

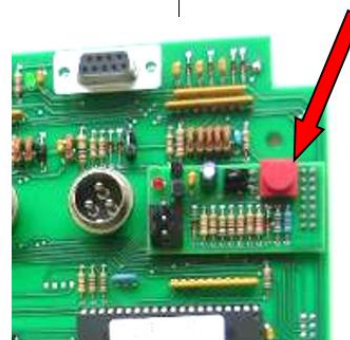


1. Open the box of the electronic unit to acced to th circuit board.
2. Quickly press the red button on the board for 3 times and hold it at the third time.

**** the control unit emits a prolonged acoustic BEEP for almost 2 seconds which means that it is now in "pairing mode" ****

 Still holding the red button pressed, at a distance of approximately 50 cm, point the remote control towards the micro IR receiver near to the red button, then press [RAISE] for a few seconds, waiting until the 3 acoustic BEEPs which confirm that the the remote has been paired.

Now you can release all buttons.



3. procedure is completed. **Turn the key on [AUTOMATIC]**

VERSION WITH THE GREEN BUTTON
ON CONTROL UNIT LID



1. Check first that the key is turned on [AUTOMATIC].
2. While holding pressed squared green button on the unit lid point the remote towards the LOAD point (at a distance of approximately 50 cm) and press [RAISE] for almost 3 seconds until the LED lights will flashing quickly for few seconds, indicating that the remote has been paired, then release all buttons.
3. procedure is completed.