

## Dometic Electronic Water Valve Replacement Instructions



**Caution!**

Turn off electrical power to toilet  
before replacing water valve.

1. Remove two wire terminals from existing water valve.
2. Turn off power to fresh water pump.
3. Remove existing valve from base.
4. Assemble new valve with bracket to the base using the screws provided.
5. Connect water line to the new supply hose.  
**Note:** Use 1/2 in. x 1/2 in. coupling supplied, if necessary.
6. Reconnect wire terminals to water valve and turn power on. Check for leaks and correct as necessary.

