


Dometic Vacuum Breaker-Hand Sprayer Kit Installation

1. Turn off water supply to toilet.
- 2a. Reach behind toilet. Twist and pull vacuum breaker from back of toilet bowl. Go to Step 6.
- 2b. For toilet model 310, loosen seat/vacuum breaker cover bolts and lift vacuum breaker cover so that vacuum breaker can be pulled from back of toilet.
- 2c. If you are unable to pull vacuum breaker from back of toilet because toilet bowl is too close to wall, press flush pedal to drain water from toilet bowl, then go to Step 3.
- 3a. For toilet model 310, remove toilet from floor flange. Tilt toilet away from wall, lift vacuum breaker cover, and pull vacuum breaker from back of toilet. Go to step 7.
- 3b. For ceramic bowl/plastic base toilets, remove pedestal cover (if applicable).
4. Loosen stainless steel band and remove plastic clamps that hold ceramic bowl and plastic base together.
5. Tilt ceramic bowl forward. Grasp vacuum breaker attached to back of toilet, then twist and pull it out of toilet. Set toilet bowl aside.
6. For toilet models 110, 111, 147, 148, 210, 706, 711-M28 and 712-TM09, remove vacuum breaker cover.
7. Remove water valve hose and hand sprayer hose from old vacuum breaker and install on new vacuum breaker with new hose clamp (supplied). Make sure strain-relief bracket is positioned on water valve connection side of vacuum breaker and hand sprayer hose (as shown) before connecting water valve hose.
8. On back of toilet bowl, pull old rubber expansion gasket out. Insert new rubber expansion gasket.
9. For toilet models 110, 111, 147, 148, 210, 706, 711-M28, 712-TM09, 3210, 3310, 3410, 4310 and 4410, remove top Disc from new vacuum breaker.
10. Using soapy water as a lubricant, insert new vacuum breaker into expansion gasket as far as possible. Reinstall vacuum breaker cover (if applicable).
- 11a. If you did not remove toilet bowl from base or floor, go to Step 16.
- 11b. If you removed toilet from floor, reassemble by positioning toilet and floor flange seal properly onto floor flange and tightening fasteners.
- 11c. If you removed toilet bowl from base, reassemble by placing ceramic bowl back to original position on base.
12. Center ceramic bowl outlet hole over flush ball seal. Check for proper alignment.
13. Position plastic half clamps under stainless steel band clamp so that tabs lock together at front of toilet base (gap in rear).
14. Tighten band clamp to a minimum of 65 in.-lbs. of torque.
15. Reinstall pedestal cover (if applicable).
16. At least 6 inches (152 mm) above toilet mount hand sprayer bracket to wall with fasteners provided. Place hand sprayer in bracket.
17. Turn on water supply to toilet.

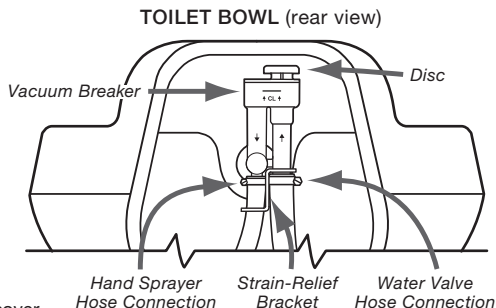

Dometic Corporation
Sanitation Division

13128 State Rt. 226
P.O. Box 38
Big Prairie, OH 44611 USA
1-800-321-9886
Fax: 330-496-3097
www.Dometic.com

REVISION B

Form No. 600344456 10/17
©2017 Dometic Corporation