

PARTS LIST

	Qty.	Part			Qty.	Part	
Key	Description	Req.	Number	Key	Description	Req.	Number
1	Seat & Cover	1	37078-1000	16	Seal [†]	1	1040-0000
2	Bowl, Compact Size, White	1	37076-0010	17	Screw [†]	2	91010-0144
	Bowl, Standard Size, White	1	37076-1010	18	Washer, Plastic* ^T	2	35445-0000
	Bowl, Compact Size, Bone	1	37076-2010	19	Seal Housing [†]	1	37043-1000
	Bowl, Standard Size, Bone	1	37076-3010	20	Lock Washer #10, Stainless Steel ¹	4	
3	Bowl Spud and 3/4" barbed adap	otor 1	18753-0609	21	Screw [†]	4	91027-0011
4	Bowl Installation Hardware	1	18753-0604	22	Slinger [†]	1	6342-0000
4A	Tee n ut**	4		23	Motor - 12 Volt EMC	1	18753-0582
4B	Washer, Plastic**	4			Motor - 24 Volt EMC [†]	1	18753-0583
4C	Socket Head Screw**	4		24	Solenoid Valve/Siphon Breaker		
5	Gasket*	1	37017-0000		12 Volt EMC	1	37038-1012
6	Base Assembly**	1	37004-1000		24 Volt EMC	1	37038-1024
7	1-1/2" Adaptor, Discharge Port	1	98023-0080	25	Switch Panel	1	37047-2000
8	Joker Valve* **	1	44106-1000		Service Kit	1	90197-0000
9	1" Discharge Port**	1	37077-1000		Waste Pump Assembly		
10	Screw**	3	96050-0568		12 Volt EMC	1	37072-0092
11	Chopper Plate with Lock n ut ^T	1	37056-1000		24 Volt EMC	1	37072-0094
12	Macerator Housing ^T	1	37014-0000	26	Evacuation Loop Hose Kit	1	37087-0000
13	Centrifugal Impeller ^T	1	37006-0000		I		01001 0000
14	Set Screw ^T	1	18753-0492		ts supplied with Service Kit. ts included with base 37004-1000.		
_15	O-ring* [†]	1	43990-0066	· · ·	is included in Waste Pump Assembly	Ι.	